




Hex Bolt 1/4-2 1/2 2pcs

Hex Bolt 1/4-2 3/4 2pcs

Flat Washer 1/4 8pcs

Nylon Nut 1/4 4pcs

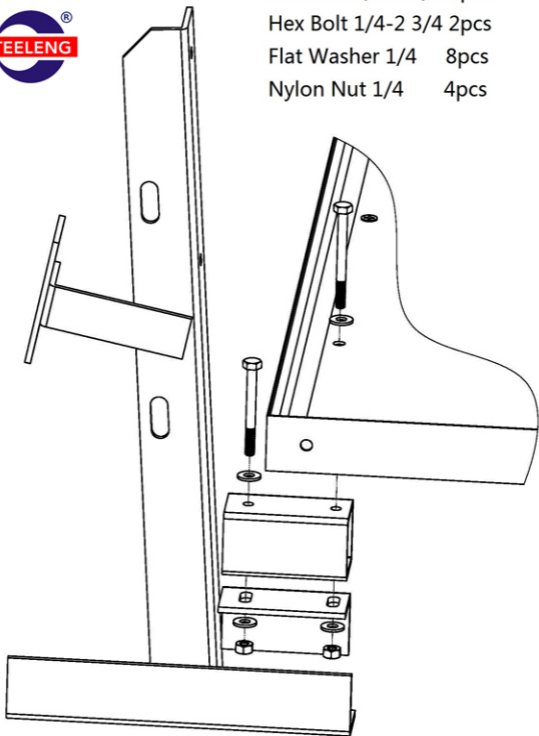

You will receive this box if you are installing a STEELENG rear seat kit on TXT 14+.

Before mounting main bracket on the cart, position riser on main frame and put shorter bolt through. Don't tighten yet. When mounting flip flop frame on the main bracket, put longer bolt through flip flop frame, riser and main frame. Then tighten.